

NOTES:

1. Engineer shall designate all danger trees which are to be removed or topped. The unit for clearing danger trees is "TM-13."
2. The unit for clearing right-of-way of specified width is "TM-14" or "TM-14(1)."

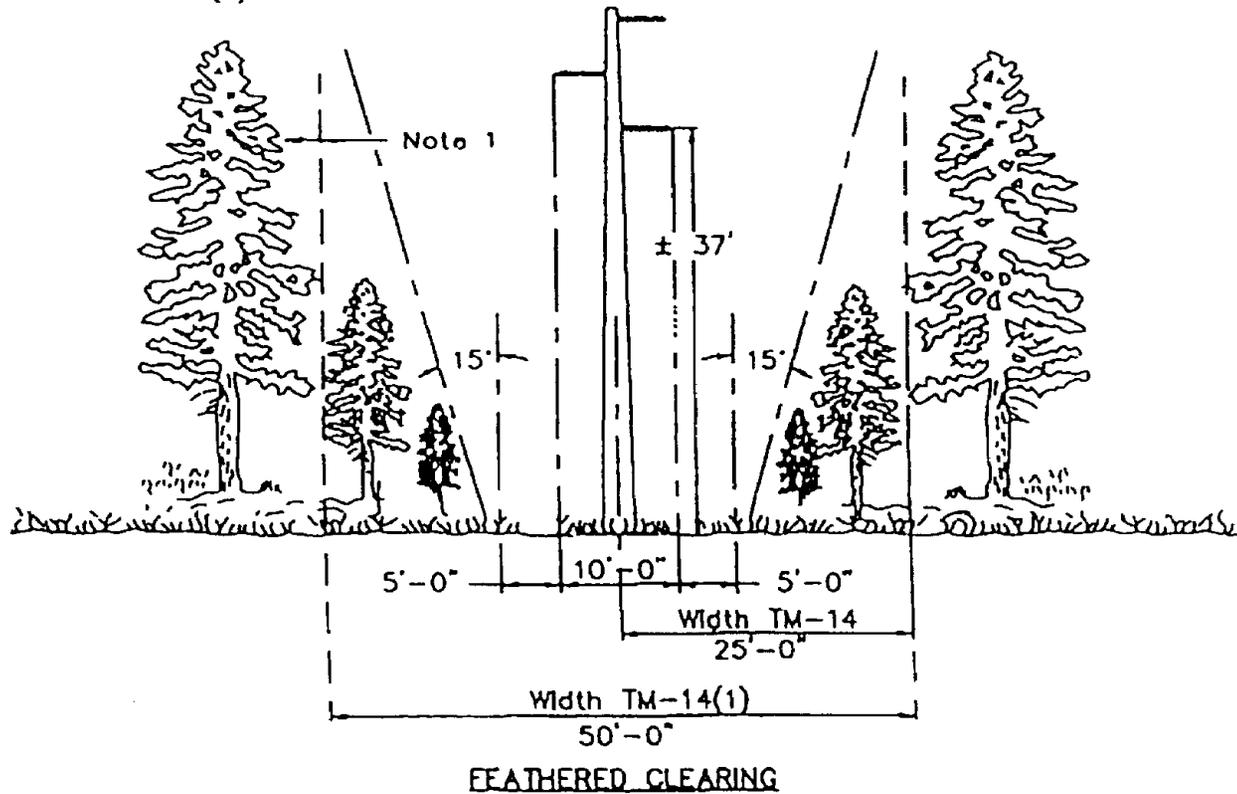


Figure 3.4-4a
Vegetation Management Requirements For Overhead Transmission Lines, Part 1